

Seats Adjustment, Front Only , (Q1A),(Q1D),(Q4Q),(3L4),(4V0)

From January 2011

**Audi**


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Memory Seat/Steering Column Adjustment Control Module,
Driver Power Seat Adjustment Circuit Breaker 1


- J136 Memory Seat/Steering Column Adjustment Control Module
S44 Driver Power Seat Adjustment Circuit Breaker 1, In the Left A-Pillar Connector Station
S133 Safety Fuse 3
T12x 12-Pin Connector
T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat
T32m 32-Pin Connector

- 34 Ground Connection Under Driver Seat
95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
371 Ground Connection 6 (in Main Wiring Harness)
B316 Positive Connection 2 (30a) (in Main Wiring Harness)
M1 Positive Connection 1 (30) (in Seat Adjustment Wiring Harness)
* Refer to Applicable Wiring Diagram for Fuse Positions
*2 Comfort CAN Bus

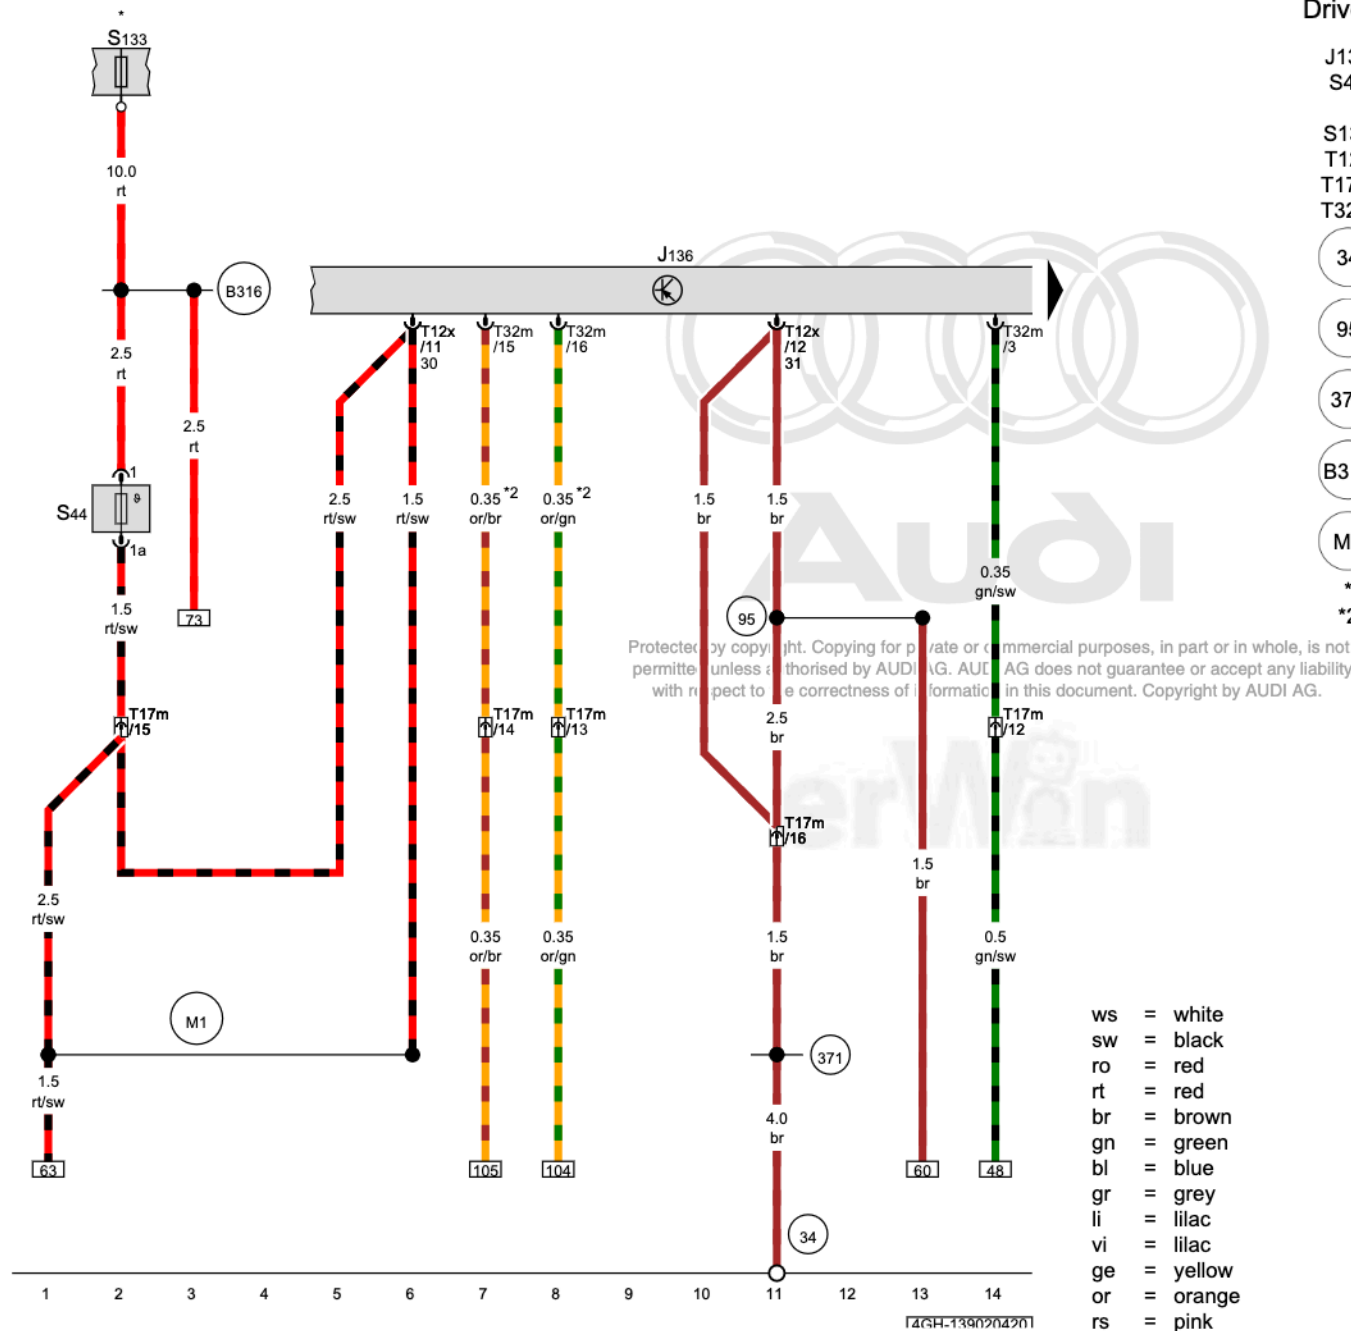

Memory Seat/Steering Column Adjustment Control Module,
Driver Seat Forward/Back Adjustment Motor, Driver
Backrest Adjustment Motor, Driver Seat Angle Adjustment
Motor, Driver Seat Height Adjustment Motor

- J136 Memory Seat/Steering Column Adjustment Control Module
- T4ce 4-Pin Connector
- T4ci 4-Pin Connector
- T4ck 4-Pin Connector
- T4cl 4-Pin Connector
- T8ad 8-Pin Connector, In the Driver Seat
- T12x 12-Pin Connector
- V28 Driver Seat Forward/Back Adjustment Motor
- V45 Driver Backrest Adjustment Motor
- V243 Driver Seat Angle Adjustment Motor
- V245 Driver Seat Height Adjustment Motor
- * Running Change

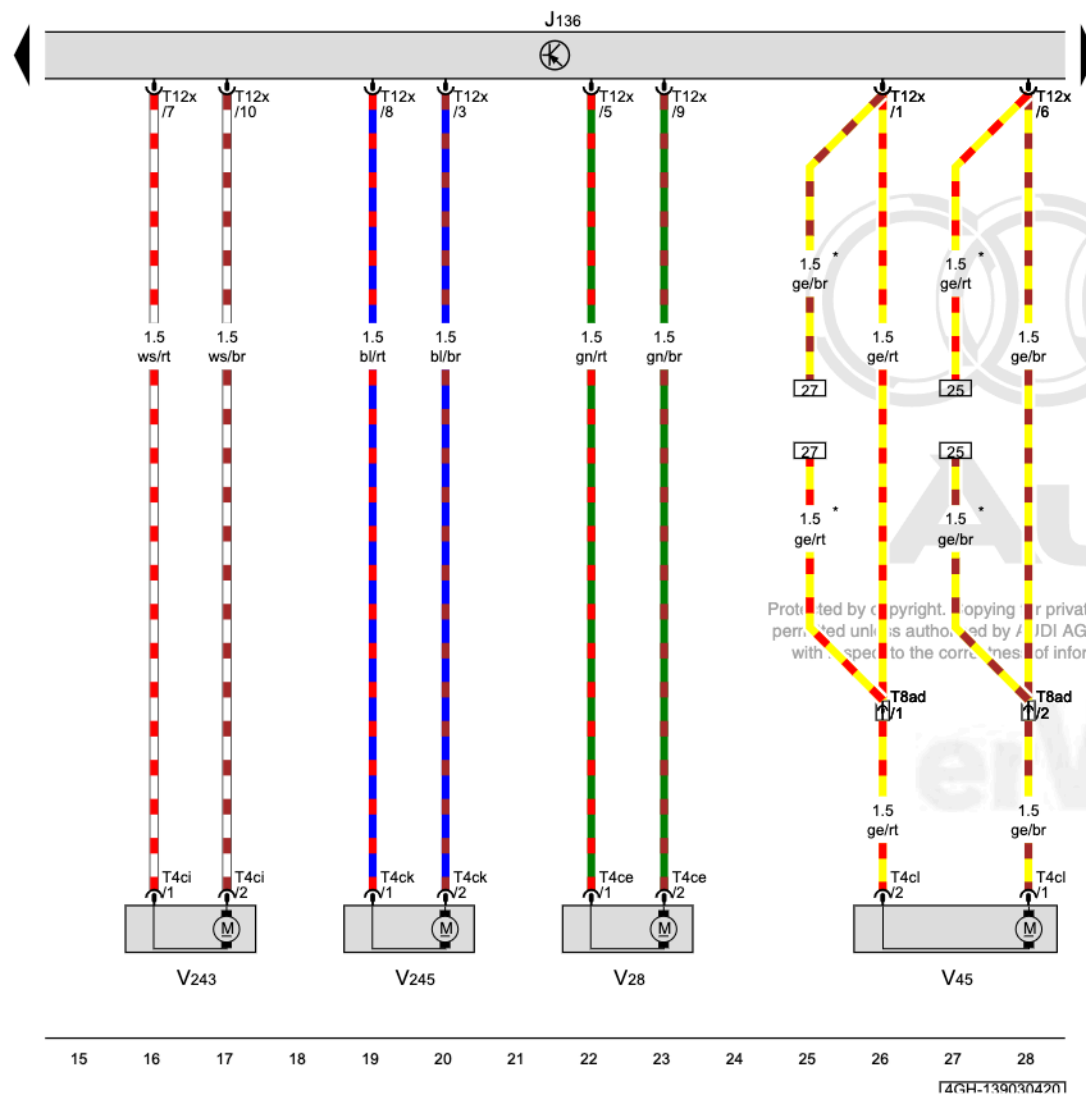


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Driver Seat Adjustment Control Head, Memory Seat/
Steering Column Adjustment Control Module

- E96 Driver Backrest Adjustment Switch
- E222 Driver Seat Angle Adjustment Switch
- E363 Driver Seat Forward/Back Adjustment Switch
- E364 Driver Seat Height Adjustment Switch
- E470 Driver Seat Adjustment Control Head
- J136 Memory Seat/Steering Column Adjustment Control Module
- T12z 12-Pin Connector
- T32m 32-Pin Connector

412 Ground Connection 3 (in Seat Adjustment Wiring Harness)

* Running Change

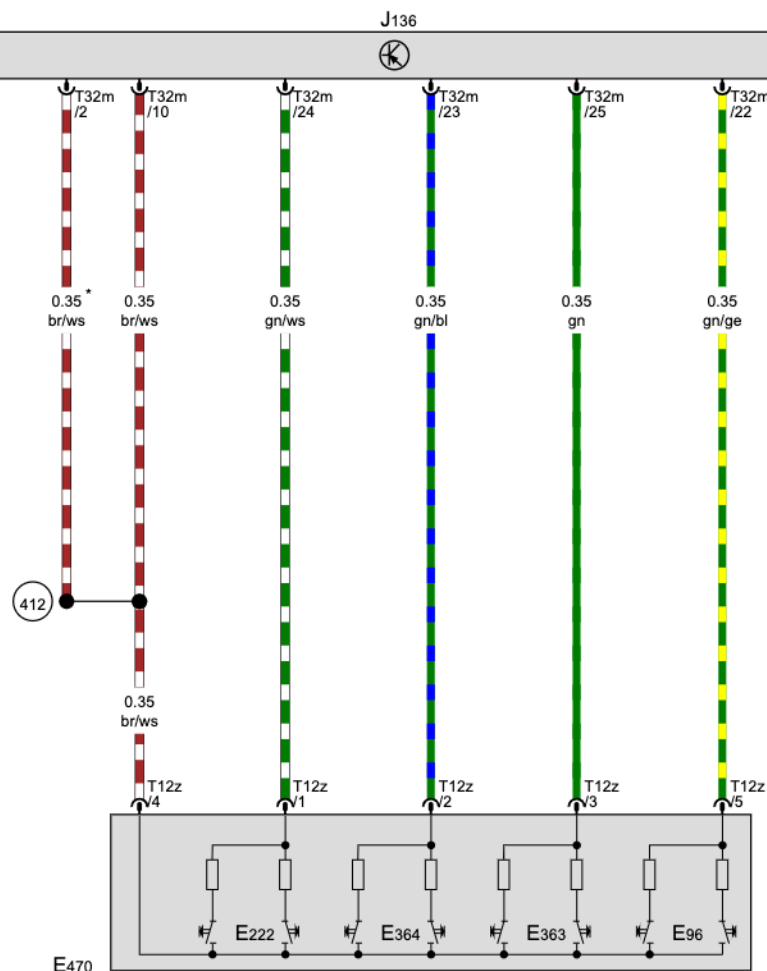

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Driver Memory Seat Control Head, Emergency Off Button, Driver Door Control Module


- E97 Driver Memory Seat Control Head
- E190 Emergency Off Button
- E283 Driver Seat Memory Button
- E338 Memory Seat Positions 1 and 2 Button
- J386 Driver Door Control Module
- T10o 10-Pin Connector
- T20e 20-Pin Connector
- T23a 23-Pin Connector, On the Left A-Pillar
- T27a 27-Pin Connector, On the Left A-Pillar
- T32k 32-Pin Connector

267 Ground Connection 2 (in Driver Door Wiring Harness)


R52 Connection 58S (in Driver Door Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted. From June 2011 AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

*2 Data Bus Wire (CAN Bus)

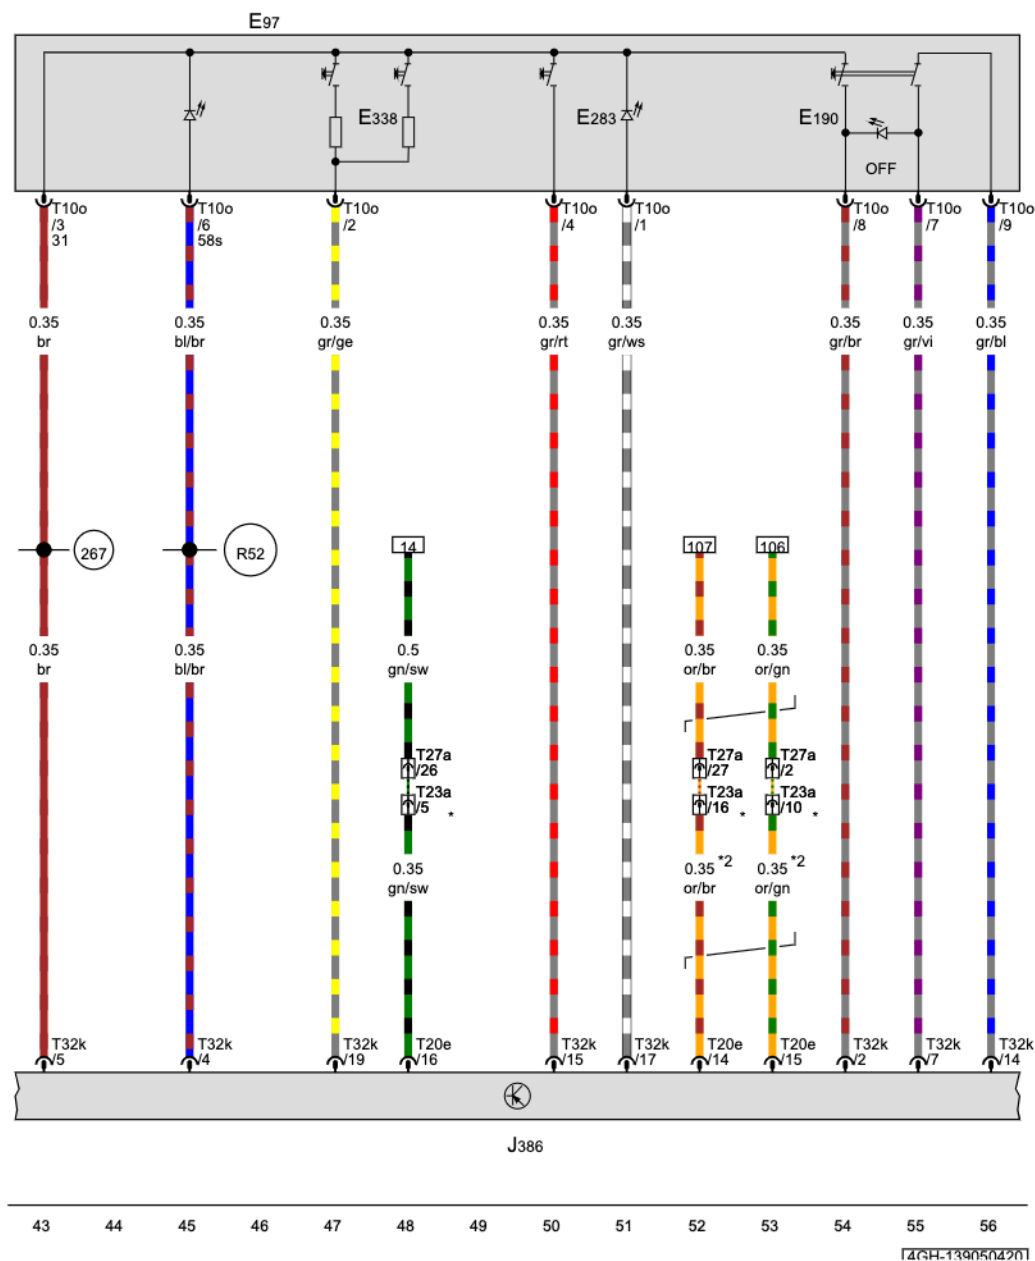

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

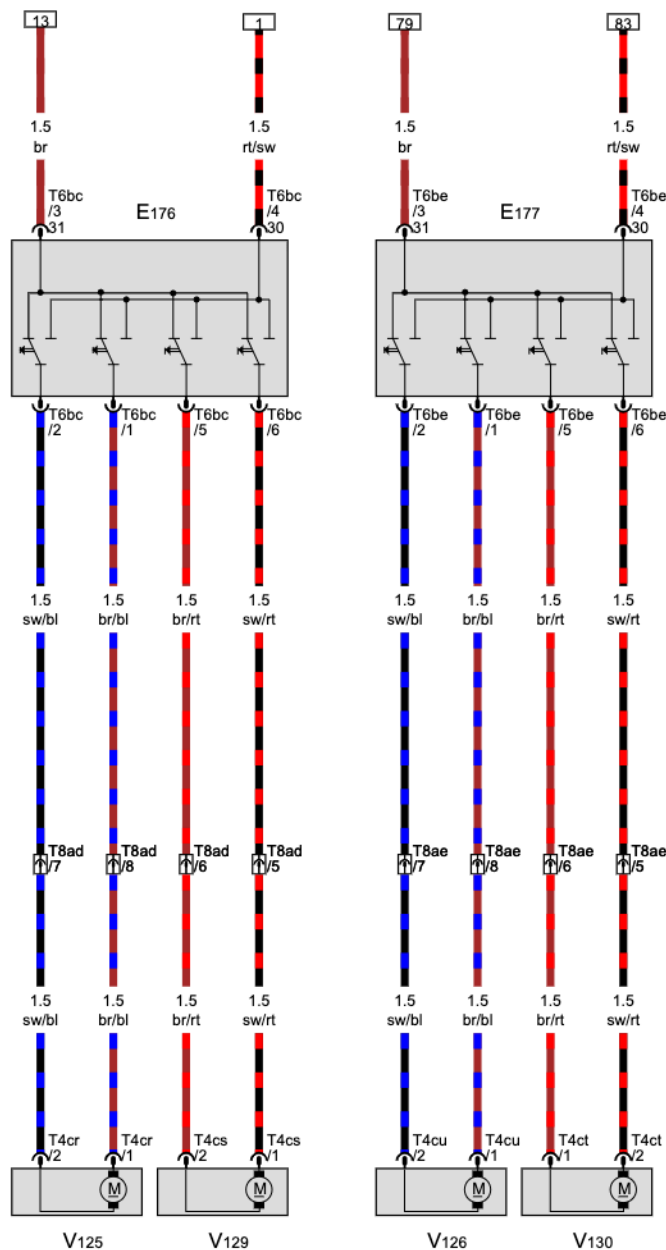

Driver Seat Lumbar Support Adjustment Switch, Front Passenger Seat Lumbar Support Adjustment Switch

- E176 Driver Seat Lumbar Support Adjustment Switch
- E177 Front Passenger Seat Lumbar Support Adjustment Switch
- T4cr 4-Pin Connector
- T4cs 4-Pin Connector
- T4ct 4-Pin Connector
- T4cu 4-Pin Connector
- T6bc 6-Pin Connector
- T6be 6-Pin Connector
- T8ad 8-Pin Connector, In the Driver Seat
- T8ae 8-Pin Connector, In the Front Passenger Seat
- V125 Driver Seat Lumbar Support Curvature Adjustment Motor
- V126 Front Passenger Seat Lumbar Support Curvature Adjustment Motor
- V129 Driver Seat Lumbar Support Height Adjustment Motor
- V130 Front Passenger Seat Lumbar Support Height Adjustment Motor



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Front Passenger Seat Adjustment Control Head, Front Passenger Power Seat Adjustment Circuit Breaker 1

- E471 Front Passenger Seat Adjustment Control Head
- S46 Front Passenger Power Seat Adjustment Circuit Breaker 1, In the Left A-Pillar Connector Station
- S131 Safety Fuse 1
- T6bf 6-Pin Connector
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat

- 35 Ground Connection Under Front Passenger Seat
- 95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
- 378 Ground Connection 13 (in Main Wiring Harness)
- B298 Positive Connection 2 (30) (in Main Wiring Harness)
- M1 Positive Connection 1 (30) (in Seat Adjustment Wiring Harness)


* Refer to Applicable Wiring Diagram for Fuse Positions
*2 From June 2014

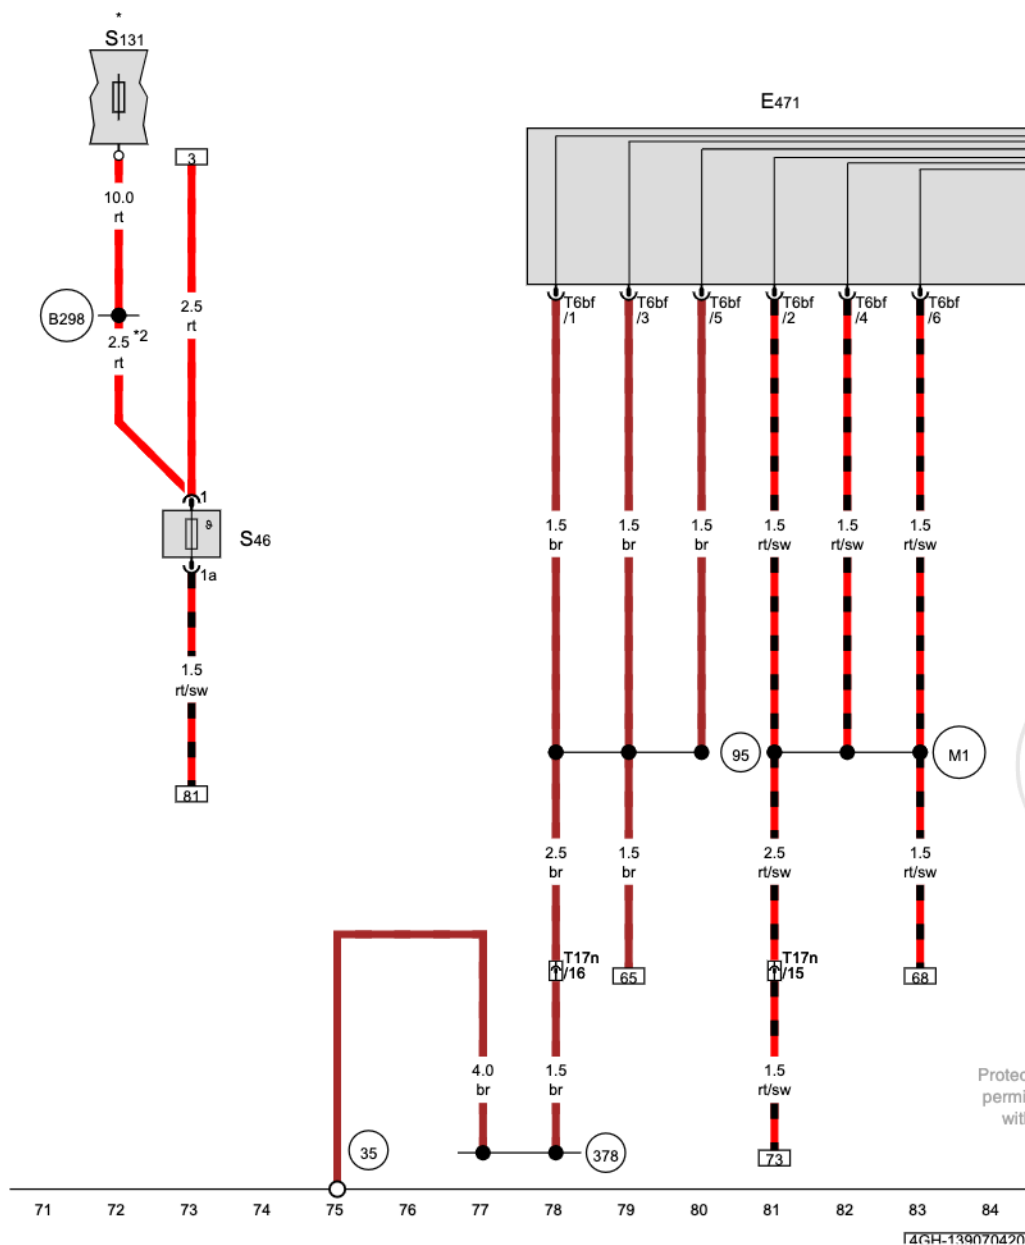

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Front Passenger Seat Adjustment Control Head

- E64 Front Passenger Seat Forward/Back Adjustment Switch
- E98 Front Passenger Backrest Adjustment Switch
- E334 Front Passenger Seat Angle Adjustment Button
- E365 Front Passenger Seat Height Adjustment Switch
- E471 Front Passenger Seat Adjustment Control Head
- T4cm 4-Pin Connector
- T4co 4-Pin Connector
- T4cp 4-Pin Connector
- T4cv 4-Pin Connector
- T8ae 8-Pin Connector, In the Front Passenger Seat
- T10s 10-Pin Connector
- V31 Front Passenger Seat Forward/Back Adjustment Motor
- V46 Front Passenger Backrest Adjustment Motor
- V244 Front Passenger Seat Angle Adjustment Motor
- V246 Front Passenger Seat Height Adjustment Motor

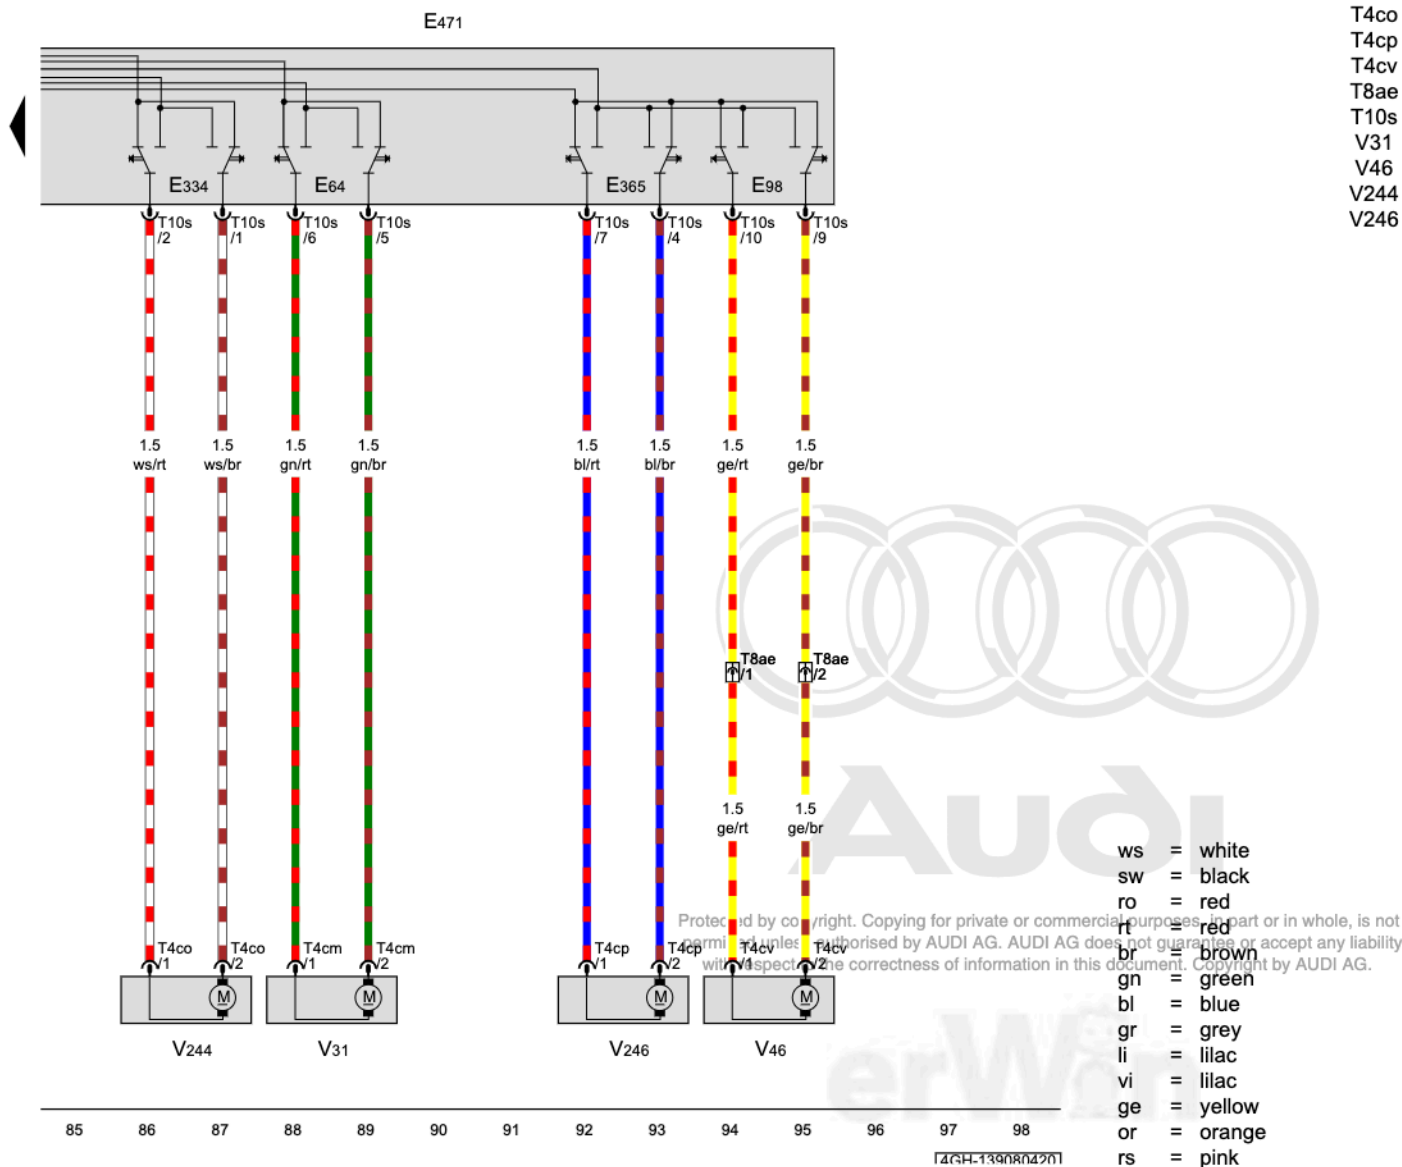

Data Bus on Board Diagnostic Interface, Comfort System
CAN Bus High Wire Junction, Comfort System CAN Bus
Low Wire Junction, Comfort System CAN Bus Low Wire
Junction 2

- J533 Data Bus on Board Diagnostic Interface
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV34 Comfort System CAN Bus High Wire Junction
- TV38 Comfort System CAN Bus Low Wire Junction
- TV80 Comfort System CAN Bus High Wire Junction 2
- TV83 Comfort System CAN Bus Low Wire Junction 2
- * Data Bus Wire (CAN Bus)

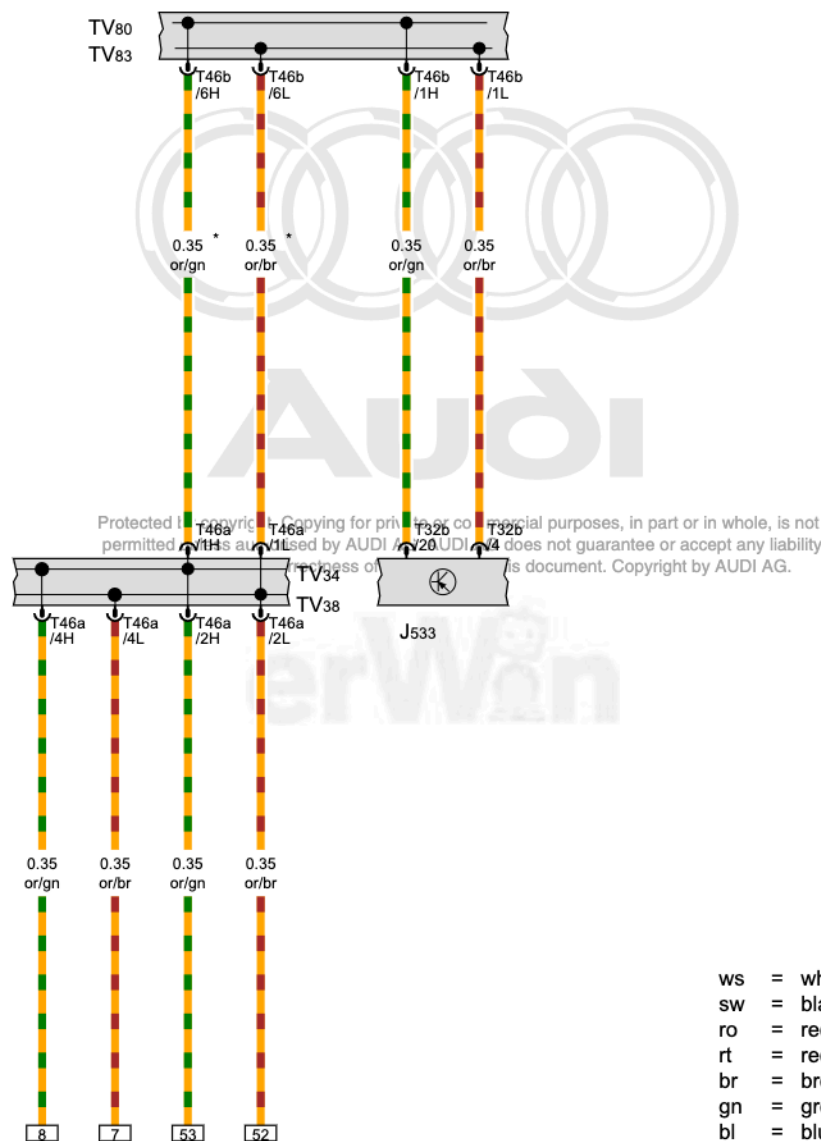

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink